


Keypad Layout.

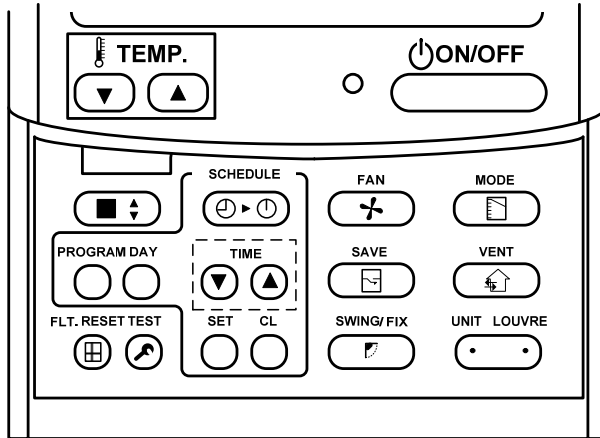

Setting Current Date & Time.

Hold **SCHEDULE** for 4 seconds. (setting appears)

Keep pressing **DAY** until day shows i.e. today, wed, thu etc.

Use the **TIME** up & down time buttons to adjust to present time.

Press **SET** to confirm. Clock will now run.

Setting On & Off Times. (referred to as scheduled operations in the manual)

Press **PROGRAM** & Screen flashes.

Press **DAY** and for convenience, bring to Mon (day)

Press **SET**.

Press **UNIT** until **PG-01** shows. (your first program)

Press **SET**.

Press **TIME** up & down arrows until your required ON TIME is displayed.

Press **SCHEDULE** to set start time (symbol is clock & 1)

Press **SET**.

Press **UNIT**. **PG-02** will appear (your off program)

Press **SET** Press **TIME** up & down arrows until your re-

quired **OFF TIME** is displayed.

Press **SCHEDULE** to set off time (symbol is clock & 0)

Press **SET** and then press **PROGRAM**

There should now be a bar line underneath **MON** to indicate that times have been entered.

To set **TUE** etc you can now copy **MON** settings as follows.

Press **PROGRAM** & Screen flashes.

Press **DAY** and bring back to **MON**.

Press **SET**.

Press **UNIT** until you see **PG-CP** (programme copy)

Press **SET**. Press **DAY** and select **TUE**.

Press **SET**. (MON times have now been copied into TUE)

to continue copying go to #

Press **PROGRAM**.

The times are now entered into the controller.

NB To activate the timer press SCHEDULE. (Flashing clock appears) Press **SET**.

To deactivate the timer press **SCHEDULE** and then **CL**.