

# TECHNICAL DATA SHEET GEL-CLEAR CONDENSATE DRAIN TABLETS




Gel-clear tablets dissolve in the condensate waste water, coating the drains in an antimicrobial protective layer preventing Biofilm formation along the whole dispersive route in any drainage system

	Name	Gel-clear
LA BEST	Product Code	AHU60
3	Packing Qty	Single blister pack
	Tablet appearance	Orange Solid Disc
	Tablet dimension	65mm x 20mm

## **SPECIAL FEATURES**

- 1 year protection
- NSF approved
- Pump safe
- Non-corrosive to metals
- 100% biodegradable
- No ecological toxicity

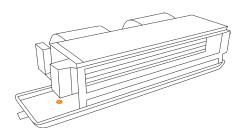

#### **DIRECTIONS FOR USE**

Prior to use, ensure that the drains are flowing and free from blockages. Simply place the tablet at the highest end, adjacent to the coil, away from the drain outlet, ensuring its in contact with the water. If it is a central drain, two tablets can be used if preferred, but only one is necessary to prevent biofilm in the drains.

The tablets should be replaced annually, cabinet stickers are issued with tablets to identify installation/replacement date.

### **BIOCIDE**

Gel-clear tablets and formula are fully compliant with the EU Biocide directive, REACH compliant, Article 95 & 65 of the Biocidal Products Directive.

Gel-clear is for professional use only, always wear suitable PPE when working with condensate waste water.

#### **DANGER**

Contains; Quaternary ammonium compounds, C12-14alkyl[(ethylphenyl)methyl dimethyl, chlorides; Quaternary ammonium compounds, benzyl-C12-18-alkyldimethyl, chlorides





H302 - Harmful if swallowed H315 - Causes skin irritation H318 - Causes serious eye damage P280 - Wear eye protection, face protection, protective gloves P301+P312 - IF SWALLOWED: Call a POISON CENTRE or doctor if you feel unwell P302+P352 - IF ON SKIN: Wash with plenty of soap and water

P305+P351+P338 - IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing

P310 - Immediately call a POISON CENTRE or doctor

P362+P364 - Take off contaminated clothing and wash it before reuse P501 - Dispose of contents/container to hazardous or special waste collection point,

in accordance with local, regional, national and/or international regulation

0844 330 3643

ĭnfo@gel-clear.co.uk

⊕ www.gel-clear.co.uk